

**OPERATING INSTRUCTIONS****Modulus of Rupture – MOR 0100 thru 5000**

- 1) Place the sample (1) on the lower anvils (2) making sure it is centered properly. Position the lower anvils in the appropriate location on the lower anvil mount (3) to fit the size of the sample.
- 2) Run the tester in the DOWN position (4) until the upper anvil (5) is just about to make contact with the sample.
- 3) Tare the load cell or gauge. Run the test until failure or desired force or deflection.

